


SECTION VII ILLUSTRATIONS

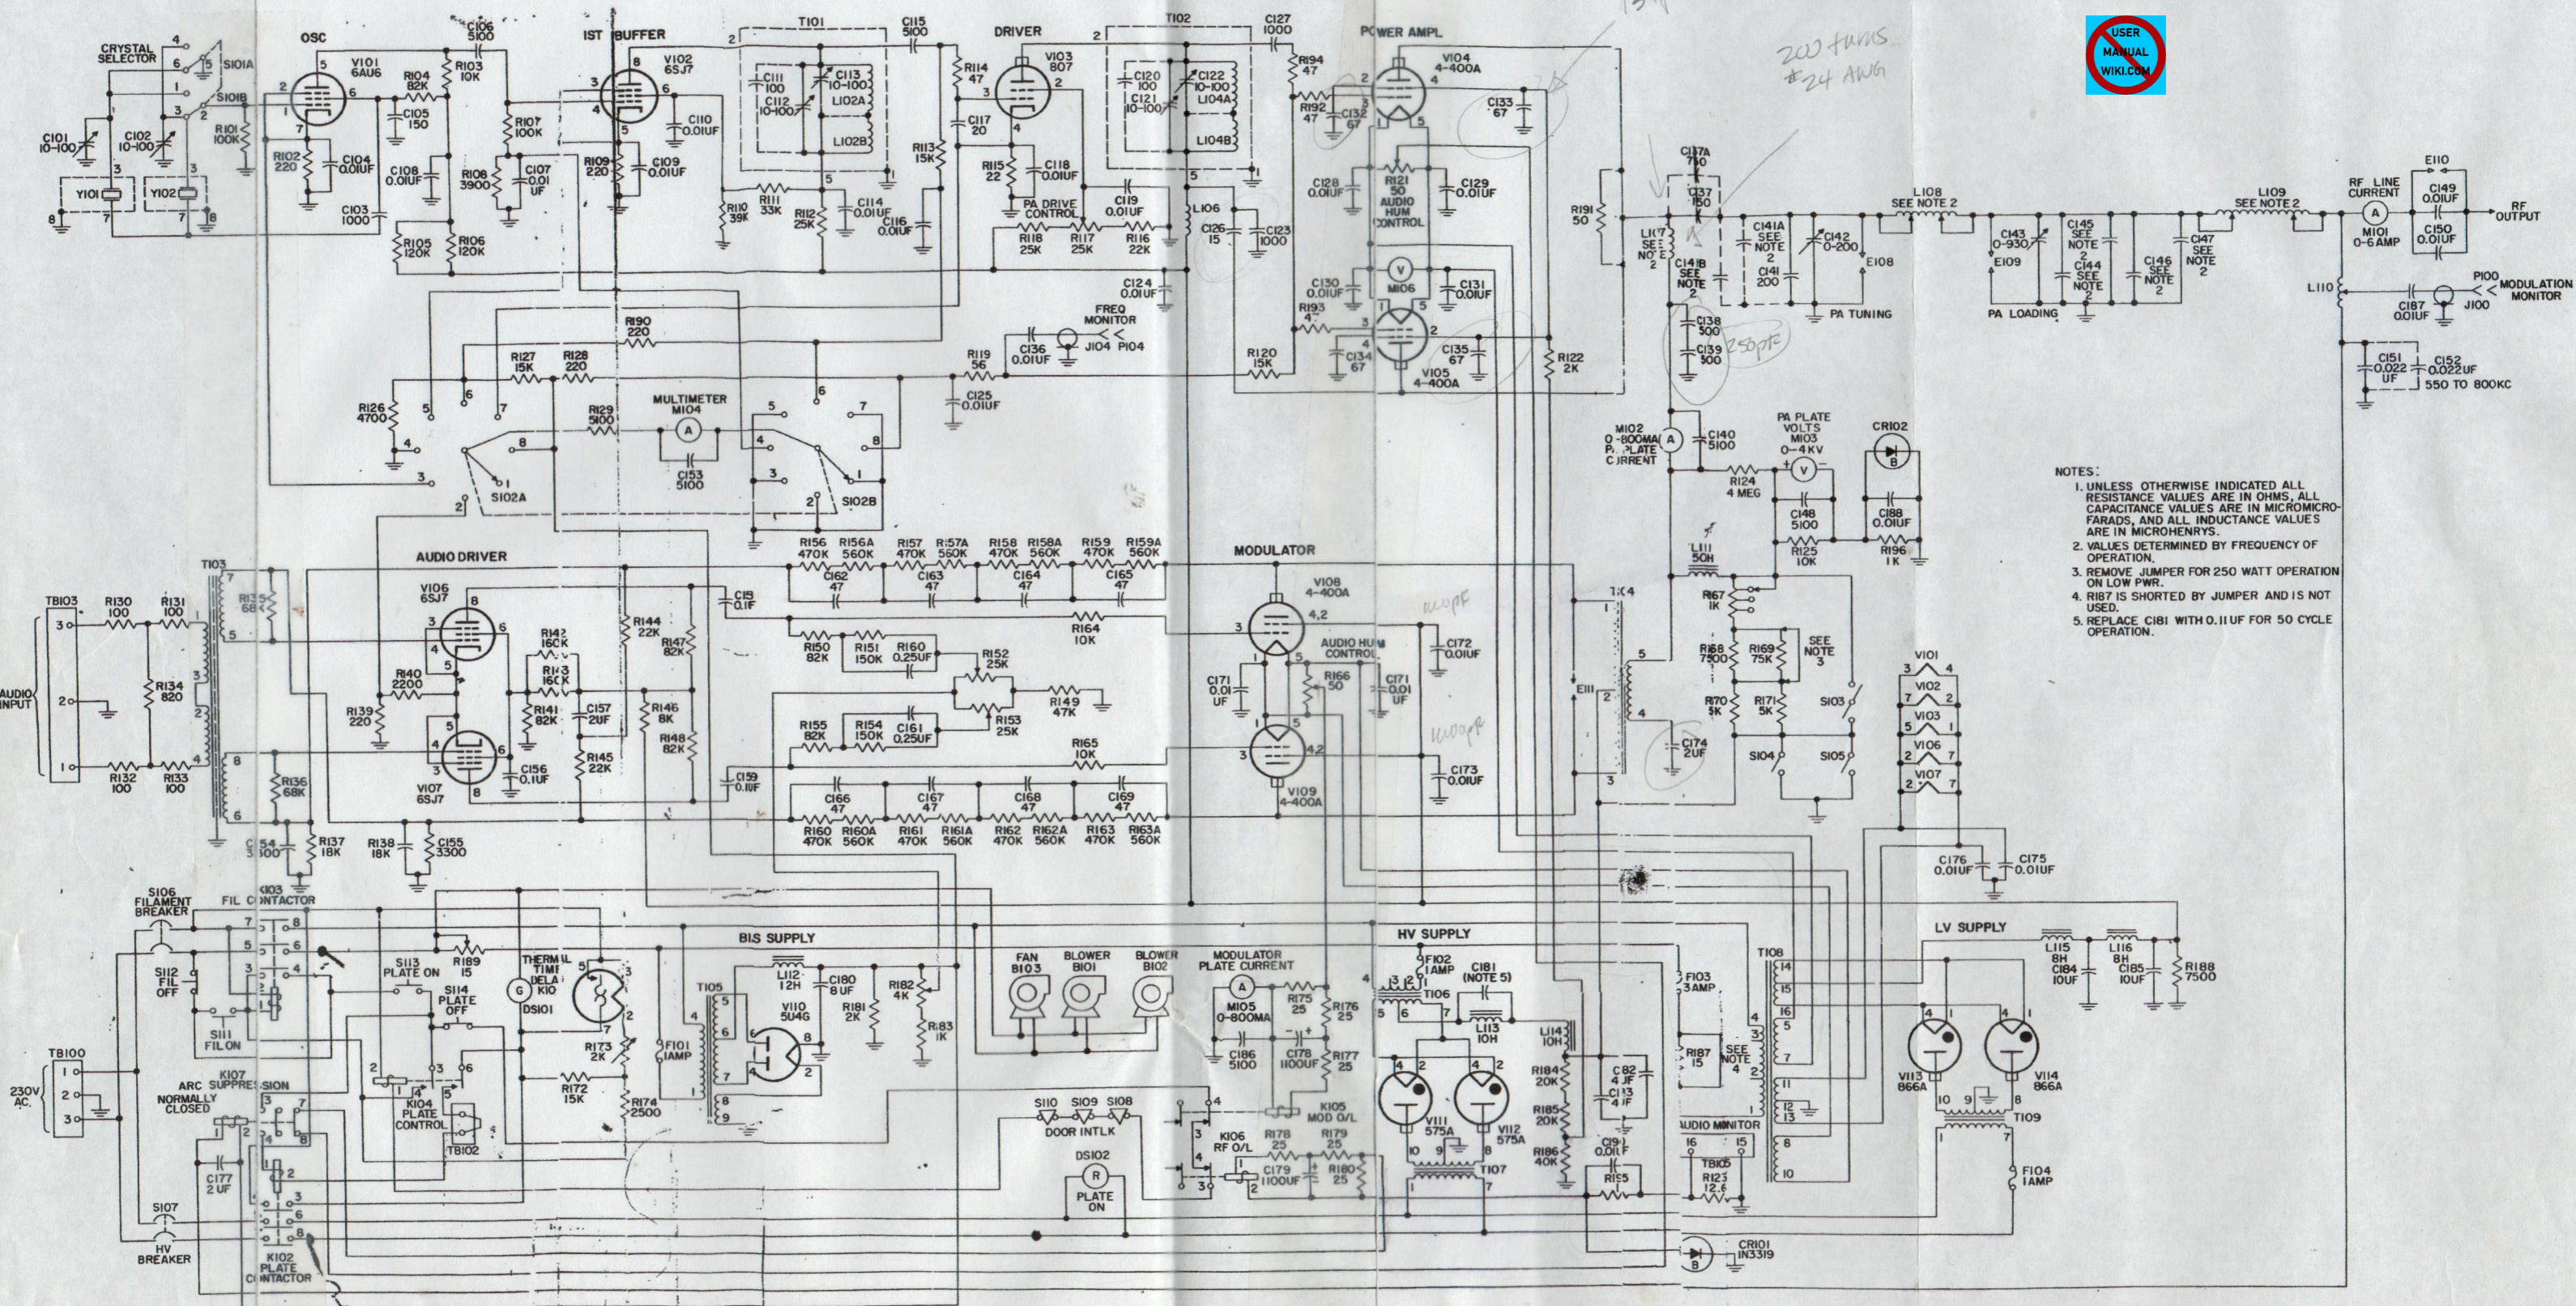

- NOTES:
1. UNLESS OTHERWISE INDICATED ALL RESISTANCE VALUES ARE IN OHMS, ALL CAPACITANCE VALUES ARE IN MICROMICRO-FARADS, AND ALL INDUCTANCE VALUES ARE IN MICROHENRYS.
 2. VALUES DETERMINED BY FREQUENCY OF OPERATION.
 3. REMOVE JUMPER FOR 250 WATT OPERATION ON LOW PWR.
 4. R187 IS SHORTED BY JUMPER AND IS NOT USED.
 5. REPLACE C181 WITH 0.11UF FOR 50 CYCLE OPERATION.

If You Didn't Get This From My Site,
Then It Was Stolen From...
www.SteamPoweredRadio.Com

Figure 7-1. AM Broadcast Transmitter 20V-3, Schematic Diagram

die sheet
7-1/7-2

after sheet